

SNAPBAG[®] for

ARRI[®] SKYPANEL[®] S120, S60 and S30

dop
Choice

Please also refer to the luminaire instructions regarding use of accessories.

L2.0010383 SBA120

L2.0008145 SBA60


L2.0008141 SBA30



- 1) Open the SNAPBAG[®].
Cord stoppers are at top & bottom.
-



- 2) Pull the elastics on all 4 corners
over the housing.
-

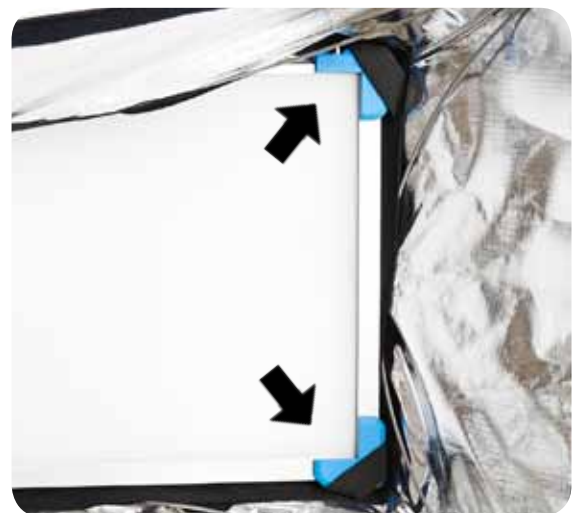

- 3) Secure the webbing diagonally
over the blue corners.
-

SNAPBAG® for

ARRI® SKYPANEL® S120, S60 and S30



Please also refer to the luminaire instructions regarding use of accessories.

4) Pull the white cord over the corners.



5) Secure the SNAPBAG®.
The cord must be under tension.

Always secure the accessory with a suitable safety cable from falling when the primary mounting method fails.



6) Insert diffusion.

